


Maintenance and Component Identification/Spare Parts

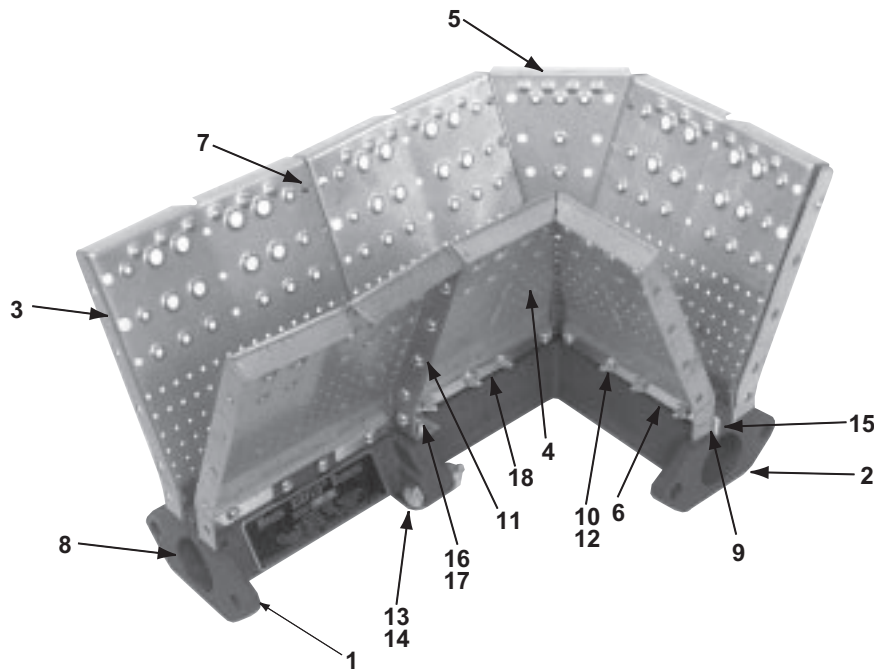

To order replacement parts:

1. See burner nameplate and indicate burner type.
2. Sketch burner arrangement (as viewed from casting side).
3. Specify replacement items required from sketch.
4. Specify quantity of each and assembly numbers from tables below and at right:

Item No.	Burner Body	NP-I	NP-II	NP-III
1	6" Straight	18061	20700	20899
	12"	18070	20699	20900
	18"	21840	21847	21848
	24"	21841	21851	21852
	12" Back Inlet	18062	20548	20901
	36" Back Inlet	2008	20010	22011
	12 x 6 Tee	18071	20547	21332
2	6 x 6 Elbow	18060	20549	21324

Item No.	Quantity Required for Indicated Section								Asby. No.	Part Description
	6" Str.	12" Str.	18" Str.	24" Str.	12" x 6" Tee	6" x 6" Elbow	12" B.I.	36" B.I.		
3	2	4	6	8	2	2	4	4	42430	Mixing Plate
4					2	1		4	43062	Mixing Plate: Inside Corner
5						1			44263	Mixing Plate: Wedge
6	2	4	6	8	2	2	4	4	18049	Back Up Bar
7	2	4	6	8	4	4	4	8	30001	Gasket/Support Bracket (Metal)
8	2	4	6	8	2		4	4	18051	Gasket (Body)
9					4	2		8	18052	Gasket (Inside)
10	4	8	12	16	12	8	8	24	40487	#10-24 x 1-3/8" Round Head Mach. Screw "Sems"
11	12	24	36	48	29	22	24	48	40484	#10-24 x 1/2" Round Head Mach. Screw "Sems"
12	14	28	42	56	37	28	28	64	40014	#10-24 Hex Nut
13	2	2	2	2	4	2	2	4	40297	3/8"-16 z 1-1/2" Hex Head Cap Screw
14	2	2	2	2	4	2	2	4	40028	3/8"-16 Hex Nut
15						2			18048	Gasket (Outside)
16	2	4	6	8	4	2	4	8	40617	10-24 x 3/8" Hex Head Mach. Screw
17	2	4	6	8	4	2	4	8	40616	Washer
18					4	2		8	18050	Back Up Bar (Inside)




CORPORATION
MUNCIE, INDIANA, USA

Maxon practices a policy of continuous product improvement. It reserves the right to alter specifications without prior notice.

INDUSTRIAL COMBUSTION EQUIPMENT AND VALVES

Maintenance and Component Identification/Spare Parts

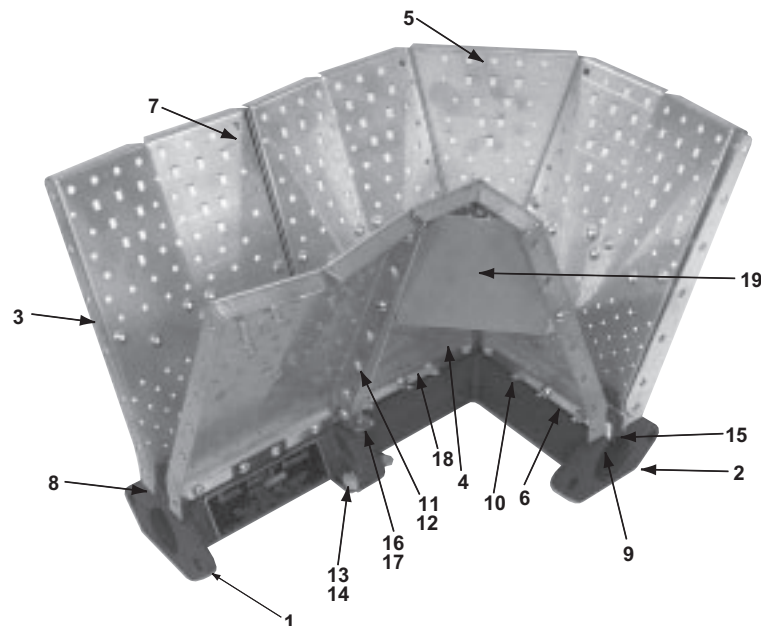

To order replacement parts:

1. See burner nameplate and indicate burner type.
2. Sketch burner arrangement (as viewed from casting side).
3. Specify replacement items required from sketch.
4. Specify quantity of each and assembly numbers from tables below and at right:

Item No.	Burner Body	RG-IV
1	6" Straight	18061
	12"	18070
	18"	21840
	24"	21841
	12" Back Inlet	18062
	36" Back Inlet	22008
	12 x 6 Tee	18071
2	6 x 6 Elbow	18060

Item No.	Quantity Required for Indicated Section								Asby. No.	Part Description
	6" Str.	12" Str.	18" Str.	24" Str.	12" x 6" Tee	6" x 6" Elbow	12" B.I.	36" B.I.		
3	2	4	6	8	2	2	4	4	23731	Mixing Plate
4					2	1		4	23734	Mixing Plate: Inside Corner
5						1			18068	Mixing Plate: Wedge
6	2	4	6	8	2	2	4	4	18049	Back Up Bar
7	2	4	6	8	4	4	4	8	30090	Gasket/Support Bracket (Metal)
8	2	4	6	8	2		4	4	18051	Gasket (Body)
9					4	2		8	18052	Gasket (Inside)
10	4	8	12	16	12	8	8	24	40487	#10-24 x 1-3/8" Round Head Mach. Screw "Sems"
11	16	32	48	64	39	30	32	64	40484	#10-24 x 1/2" Round Head Mach. Screw "Sems"
12	18	36	54	72	47	36	36	80	40014	#10-24 Hex Nut
13	2	2	2	2	4	2	2	4	40297	3/8"-16 x 1-1/2" Hex Head Cap Screw
14	2	2	2	2	4	2	2	4	40028	3/8"x16 Hex Nut
15						2			18048	Gasket (Outside)
16	2	4	6	8	4	2	4	8	40617	10-24 x 3/8" Hex Head Mach. Screw
17	2	4	6	8	4	2	4	8	40616	Washer
18					4	2		8	18050	Back Up Bar (Inside)
19					2	1		4	18066	Deflector Plate